



## 11. Using Voice Memo

The Voice Memo program allows you to record and play brief messages. From the main program screen, Voice Memo displays a list of stored voice memos that you can select, play back, or delete. The program also allows you to import or export sound files using storage (compact flash) cards.



**Important! Speech recognition is turned off DURING voice memo recording. To resume Speech Recognition, you must press the PTT button.**

### Recording Voice Memos

 
The “Record” speech command or the menu command are available to record voice memos.

The maximum recording time allowed per voice memo is 3 minutes (180 seconds.)



### To record a voice memo—

The maximum recording time for each voice memo is 3 minutes

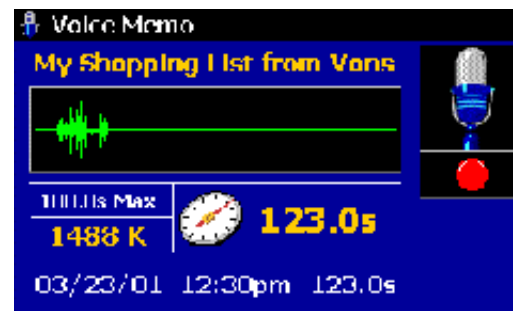

### Using speech commands—




- Say "Auto PC." Wait for the green "Listening" bar to appear. OR Press the PTT button.
- Say "Voice Memo" (to launch the program).
- Say "Record," then start speaking.
- Press **ENT** to stop the recording.



**Using the faceplate or remote controller—**

1. Say “AutoPC.” Wait for the green “Listening” bar to appear. OR press the **PTT** button.
2. Say “Voice Memo.”
3. Say “Record”, and then start talking.
4. Press **ENT** to stop recording.

**Using menu commands—**

1. Press the Start key to select **Voice Memo**. OR Press  (small screen) /  (large screen) to select Voice Memo. Press **ENT** to display the main screen.
2. Press **MENU**.
3. Press  to select **Record**, and then press **ENT**.
4. Press **ENT** again to stop the recording.

**Scenario**



 
 
If you are new to Voice Memo, conduct a test. Record a brief message and then play it back. If the play back is too loud or too soft, you will need to adjust the Microphone Gain setting. (See Adjusting Microphone Gain later in this section.)





## Playing Back Voice Memos

To open and play a voice memo—

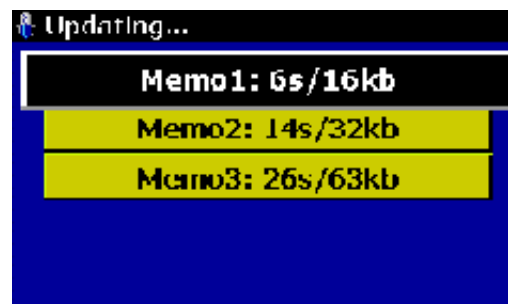


Using speech commands—

- Select the desired voice memo to play back.
- Say “Auto PC.” Wait for the green “Listening” bar to appear. OR Press the PTT button.
- Say “Play” to play back the displayed voice memo file.
- Say “Next” or “Previous” to play other voice memo files.








#### Using the faceplate or remote controller—

1. Press **MENU** while in Voice Memo application.
2. Press  to select **Open**, and then press **ENT**.
3. Select a memo, and then press **ENT** to start play back.

#### Fast Forward, Fast Reverse, and Pause



During playback, the following options are available—



- Press  to rewind (fast reverse).
- Press  to advance (fast forward).
- Press **ENT** to pause playback, and then press **ENT** or  (Right) to resume.
- Press **ENT** to end playback.



## Muting the CD Player or Radio While Recording



To mute the CD player and Radio during voice memo recording—



1. Press **MENU** while in the Voice Memo main screen.
2. Press  to select **Mute On Record**.
3. Press  and select **On** or **Off**.
4. Press **BACK** to exit.

## Adjusting the Microphone Gain

You can adjust microphone sensitivity using the Microphone Gain option. You can set the gain control from - 10 (the lowest) to + 10 (the highest).



To set the gain level for the microphone—

1. Press **MENU** while in the Voice Memo application.
2. Press  to select **Microphone Gain**.
3. Press  to select a value within a range of  $\pm 10$ .
4. Press **BACK** to exit.



## Deleting Voice Memos




You can delete voice memos using voice commands or the delete menu command. Note that you cannot delete Locked memos.

### To delete a single voice memo—

#### Using speech commands—

- Say “Auto PC.” Wait for the green “Listening” bar to appear. OR Press the PTT button.
- Say “Voice Memo.”
- Say “Delete.”
- Say “Yes” to delete the voice memo. To cancel, say “No.”

#### Using the faceplate—

1. Press  to choose the voice memo you want to delete.
2. Press **MENU**. Press  to select **Delete**, and then press **ENT**.
3. Press  to select “Yes,” and then press **ENT**. To cancel, choose “No,” and then press **ENT**.





To delete all voice memos—

 
Using the faceplate—

1. Press **MENU**, choose **Delete All**, and then press **ENT**.
2. Choose “**Yes**,” and then press **ENT**. To cancel, choose “**No**,” and then press **ENT**.

### Using the Auto-Delete Option



The Auto Delete option automatically deletes voice memos based on a time period you specify.

To change the auto-delete time period—








1. Press **MENU**.
2. Press  to select **Auto Delete**.
3. Press  to select an option. Your choices are: **Never**, **5 days**, **15 days**, and **30 days**.


## Locking or Unlocking Voice Memos

 You may lock an individual voice memo to keep it from being deleted. To delete a locked voice memo, you must first unlock it. Note that the screen displays a lock icon when you select a voice memo that has been locked.

**To lock a voice memo—**

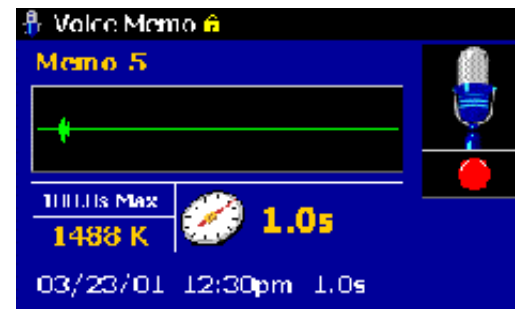




1. Select the voice memo you want to lock.
2. Press the pound “#” key. **Optionally**, press **MENU**. Press  to select **Lock**, and then press **ENT**.

As shown above, locked voice memos display the lock icon in the upper portion of the screen.

#### **To unlock a voice memo—**




1. Select the locked voice memo that you want to unlock.
2. Press the “#” key. **Optionally**, press **MENU**. Press  to select **Unlock**, and then press **ENT**.



## **Renaming Voice Memos**

#### **To rename voice memos—**



1. Select the voice memo file to rename.
2. Press **MENU**.
3. Press  to select **Rename**, and then press **ENT**. A data entry form appears next.



4. Use the keypad or  to enter a letter or number in the first edit box. Use  to move to the next or previous edit box. This may take some practice.
5. Select **Done** when finished, and then press **ENT** to save your changes.

### Exporting Voice Memos

The export function allows you to copy voice memos from the Joyride™ system's internal memory to a storage card. Voice memo files exported to a storage card are saved in the WAV file format, and can be played back on a PC.


**Be sure the CF card is inserted in the CF card slot on the front panel of the Joyride™ system before exporting files.**



**Warning! Do not turn off the ignition switch during an export of a voice memo.**




#### To export the current voice memo—

1. Select the desired memo to export.
2. Press **MENU**.
3. Press  to select **Export**, and then press **ENT**.





**To export all of your voice memos—**

1. Press **MENU**.
  2. Press  to select **Export All**, and then press **ENT**. An option screen will appear to let you know that files with the same name will be overwritten.
  3. To continue, highlight **"Yes,"** and then press **ENT**. Otherwise, highlight **"No"** and press **ENT**.
- As prompted by the system, accept or change the default name of a file using the Export to Storage Card screen.




## Importing WAV Files

A Joyride™ system Voice Memo file can only be imported and played by the Joyride™ system Voice Memo application.



**Be sure the CF card containing proper Joyride™ system Voice Memo files is inserted in the CF card slot on the Joyride™ system unit before importing files.**

### To import WAV files—

1. Press **MENU**.
2. Press  to select **Import**, and then press **ENT**.

 


## Allocating Memory for Voice Memo Storage

The Voice Memo program adjusts the memory size depending on the available system memory. If the available system memory is 2MB or greater, the maximum amount of memory available for voice memo storage will be 1 MB. If the available system memory is less than 2MB, the maximum amount of memory available for voice memo storage will be ½ the remaining system memory (e.g., system memory = 1.5 MB, voice memo storage = 0.75 MB; system memory = 300KB; voice memo storage = 150 KB).



To change voice memo storage requirements—

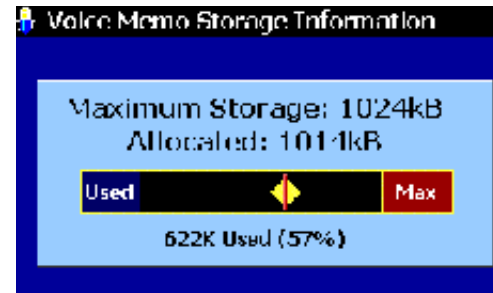

1. Press the **Start** key to select **Voice Memo**. OR press **◀▶** (small screen) / **⏏** (large screen) to select Voice Memo. Press **ENT** to display the main screen.
2. Press **⏏** to select **Memo Store**, and then press **ENT**.
3. Press **◀▶** to move the memory allocation indicator to the desired position.
4. Press **Back** to exit.

